

televic

Creating better
understanding,
one meeting at a time


Everything you need for your
formal or informal meetings,
on-site or hybrid meetings,
with voting & interpretation.



CONFERENCE



INDEX

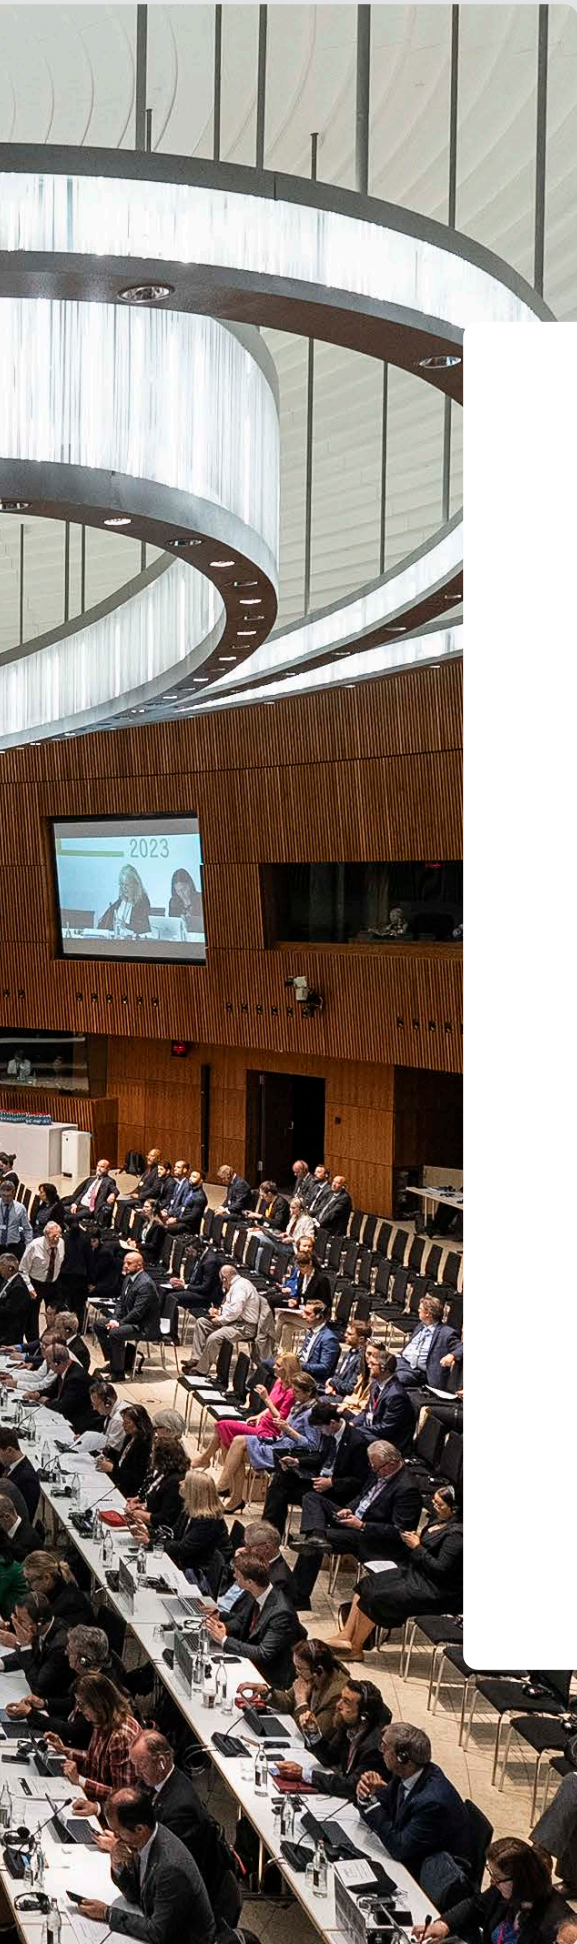

5	Introduction Televic Conference
6	uniCOS
10	Confidea FLEX
14	D-Cerno
18	Smart Audio & Control
20	Meeting Management Software
22	Unite
26	Interpretation

TELEVIC
HEADQUARTERS,
BELGIUM



Creating better understanding

- + Physical, remote & hybrid meetings
- + Crisp, clear audio
- + User-friendly voting & interactivity
- + Interpretation solutions



Televic Conference has been a reference in **speech amplification and modular solutions** for council meetings for decades. Our internationally acclaimed technologies are used by international institutions with the most demanding requirements, such as the **NATO headquarters**, the **European Parliament** and the **World Health Organisation**. But our solutions are also available on a smaller scale, with hardware and software set-ups tailored to the specific needs of local city councils.

uniCOS

Efficient multimedia meetings with multiple screens



Create efficient,
**collaborative
multimedia meetings**
that truly bring your
participants together.

uniCOS is a state-of-the-art multimedia conference unit that provides everything you need for meetings that require multiple individual screens. Top-notch audio quality, up to 6 lip-sync video streams, document-sharing features and user-friendly hybrid meeting applications – all ready for you to explore on the touchscreen. Thanks to one single CAT 5e cable, the installation is a breeze.

uniCOS features

Teams & Zoom integration

Focus on the message, not the technology. With uniCOS, you can bring your on-site and remote attendees together by means of your preferred cloud-based meeting platform. From Zoom to Teams and Webex (and many more): all participants will be harmoniously connected in an optimal audiovisual setting. Ready to conduct the smoothest hybrid meetings ever?

Hear and be heard

Each conference device in the uniCOS system has an individual gooseneck microphone with a directional polar pattern. Those cardioid pickup microphones do more than detecting audio. Since they are most sensitive to sounds immediately in front of them, any side noises are deftly shut out. Both live and remote participants will be able to understand and deliver messages. The built-in loudspeaker carries their voices around the room, distributing them equally – and highly intelligibly – across all conference devices.

Solving line of sight issues

Finding the correct location for displays and cameras in your new hybrid meeting space is often a challenge. These line of sight issues typically come from either people blocking the view of the camera and displays or from restrictions on where to mount the hardware and run the cables.

uniCOS solves this line of sight problem by providing an all-in-one solution with integrated camera, video display, microphone and loudspeaker.

All-in-one solution

The wow factor of this tool goes beyond its award-winning design. Provide every attendee with their own video monitor, simplify screen sharing, and refer camera location or automation issues to the past. Seamlessly manage audio and video challenges, and make your meetings increasingly efficient along the way.



reddot design award
winner 2020

Award-winning design

uniCOS allows a clear view of both the speakers and all the content you share. The small individual screens easily overcome line-of-sight issues, even in the narrowest board rooms or the most inconvenient seating arrangements. There is no need to invest in bigger screens or mount cameras, that will inevitably make your meeting space look like a sports bar or a TV studio.

This award-winning design is the result of a careful product development process that fully focuses on our customers' needs. From the adjustable camera to the tiltable screen and the non-intrusive design: they all contribute to an unparalleled user experience.

Hybrid Meetings

uniCOS provides a straightforward and efficient solution for hybrid meetings. The onboard camera instantly transmits the video feed of the active in-room participant to the hybrid meeting platform whilst simultaneously displaying a close-up view of the meeting on their screens. Sharing multiple video feeds at once is possible by adding an additional multi-window processor or using a hybrid meeting platform which supports multiple cameras.

Sharing external content is also made easy by connecting a laptop to a Televic video injection box and simply pressing a button to push the content to the participants.



Decision-making
made smarter,
faster & precise

uniCOS solutions & products



TABLETOP UNIT

Meet our flagship multimedia conference solution: uniCOS T/MM10. Specifically designed for the Plixus architecture, it can be configured for either chairpersons or delegates. Features include HQ audio, up to 6 lip-sync video streams, document-sharing features, and more. With the tiltable 10" touchscreen, all audiovisual information is literally at the participants' fingertips.

But it gets even better. uniCOS T/MM10 is delightfully easy to install with a single CAT 5e cable and powered by the Plixus network. If you need it for a specific project, feel free to customize the solution with flush-mount units.




INTERPRETER DESK

Take your multilingual meeting management to the next level with the interpreter desk – designed for and by interpreters.



AUTOMATIC CAMERA CONTROL

Discover Confero CAM for automatic conference camera tracking.

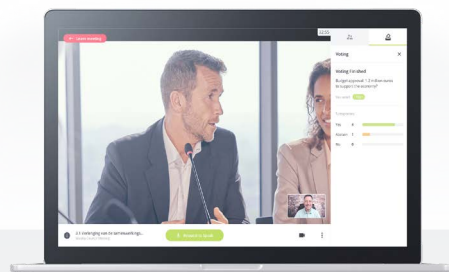

CONFERO

Streamline meeting control with this all-in-one, convenient and web-based meeting management solution.



German Stock Exchange
in Frankfurt, Germany

Confidea FLEX

One single unit with different faces



reddot design award
winner 2020

The **Confidea FLEX** device **adapts** to the needs of every meeting or conference.

Delegates can become chairpersons with a single movement, **and the other way around**. The chairperson controls the meeting by starting and pausing the meeting, selecting the next person on the speaker request list, the agenda, the voting sessions and the recordings.



Confidea FLEX

Wired tabletop unit, with touch screen, integrated speaker, microphone connector, NFC badge reader, microphone buttons with hidden LED lights, braille guides, Bluetooth support to connect devices for hearing impaired people. Microphone sold separately.

A mix-and-match conference solution

The Confidea FLEX device works with the architecture of the Plixus network and can be combined with other systems compatible with the Plixus network as well. Thanks to the mix-and match, it is possible to connect Confidea FLEX to the uniCOS multimedia system. If you (accidentally) move the microphone, this stable device won't budge an inch. You can even add the Confidea FLEX G4 or Confidea GO G4 devices to a wired setup by just adding the WAP G4 to the Plixus network.

The most versatile tabletop conference device

Confidea FLEX is a tabletop conference device with a touch screen. Developed with a durable housing in zinc and aluminum, the device is stable and does not move, even when moving the microphone. The touch screen of the Confidea FLEX allows you to see what is relevant: the agenda, speech time, interpretation channels, and so much more. The special feature of the system is the possibility to extend the functionalities of the device with additional licences. It grows with the needs of the room and adapts to you and your meeting.



Confidea features



Ultimate flexibility

Do you have to manage multipurpose meeting rooms, with layouts that change according to the event at hand? Then this system is your perfect partner. Quick and easy to deploy, the Confidea units support both basic and large-scale meeting requirements. Expand them as you wish.

Hear and be heard

Since the microphone units boast integrated loudspeakers, both on-site and remote participants will be able to deliver their message in high-quality audio. Annoying background noise? Not this time.

Smart battery management

Designed for portability, Confidea FLEX G4 will not let battery life get in the way of a productive meeting. Each unit comes with a compact Li-ion battery that will keep the system up and running for 12 hours. If you want to extend that lifetime to a full day, don't hesitate to add a second battery in the additional compartment.

Do you need to replace an empty battery while the system is still operating ('hot swapping')? No problem. Simply add a spare and remove the empty one. No need to reboot. Don't forget to charge the battery: it only takes two hours.

Easy-to-click microphone

Simply push and lock the microphone to get started, and effortlessly remove it from the station by pressing a button. Choose from several microphone options to guarantee crisp quality, regardless of your room set-up. Different microphone lengths, flexible components for a more precise positioning and voice capturing, a low-profile model for a discreet look, ... Everything is possible.

Teams & Zoom integration

Conducting hybrid meetings has never been easier. Zoom, Teams, Webex, ... Whichever conferencing tool you pick, Confidea will allow you to connect to your favorite application and get down to business.

Easy configuration (Confero 360)

If you are particularly fond of your standard laptop, tablet or browser, there is no need to fret. The Confidea system has a built-in web server, so it is easy to configure and manage with your beloved tools.

Secrets are safe

As meetings are meant to be private and confidential, the Confidea FLEX G4 wireless system uses WPA2 Enterprise encryption. What happens in the meeting room, stays in the meeting room.

Worry-free wireless

Based on standard Wi-Fi 5 technology, the system uses a combination of advanced techniques to improve the quality and reliability of the signal reception. That results in a remarkable stability, unique in the wireless conferencing market – truly best in class.

Future-proof investment

One unit, endless possibilities. With its flexible 'one-time purchase' license system, you can keep upgrading Confidea FLEX G4, so you always have the latest features at your disposition. If your meeting needs change (voting options, participant identification, ...), just add the necessary licenses and assign them with a single click.

Confidea solutions & products



🔌 Wired solution

CONFIDEA FLEX WIRED


Delegates can become chairpersons with a single movement, and the other way around. The chairperson controls the meeting by starting and pausing the meeting, selecting the next person on the speaker request list, the agenda, the voting sessions and the recordings.



📶 Wireless solution


CONFIDEA FLEX G4

Enjoy unparalleled meeting flexibility with a touch screen conference device that is easily configured through licenses. Activate or deactivate voting, authentication, language channels and more through a simple tap. And switch between chairperson or delegate, on a single device.

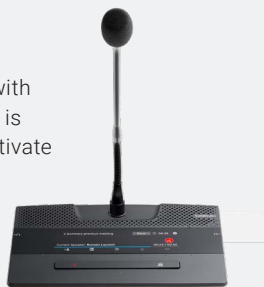

+ CONFIDEA GO G4

Looking exactly like its award-winning twin, Confidea FLEX G4 but without the display, Confidea GO makes it possible to meet up and connect to any remote platform with a discussion-only unit.

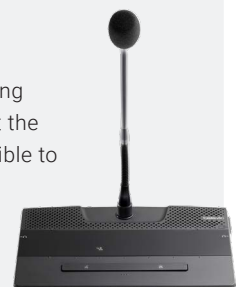

BATTERY PACK

Confidea BP G4, a high-capacity Li-ion rechargeable battery pack with an autonomy of 12h.



CHARGING TRAY

The Confidea CHT G4 charging tray is a compact rack-mountable device, able to charge up to 10 batteries.



WIRELESS ACCESS POINT

The compact yet powerful Confidea FLEX G4 access point is the heart of the wireless conference system. It ensures a reliable, secure, and robust communication between all units. The built-in web-based software streamlines the installation, while additional licenses can unlock any meeting management tools you could wish for (polls, reporting features, etc.).



TRANSPORT CASE

With the Confidea FLEX TC transport case, you can easily transport a complete meeting set-up from one room or venue to another – anywhere, anytime. There is room for up to 16 FLEX units (including batteries), 16 microphones, an access point, an adapter, and a couple of cables.

NEW

D-CERNO

Digital discussion system for conference rooms



A hybrid-ready
discussion system for
**small and medium-
sized meeting rooms.**

D-Cerno is a plug & play wired digital discussion system for **small to medium-sized meeting rooms**. With our new hybrid-ready central engine, D-Cerno offers unparalleled flexibility and makes integration with external systems easy. Simply connect all units and your hybrid meeting gateway to the central engine and start your meeting.

D-CERNO features

Hybrid Ready

With the new D-Cerno central engine, organizing a high-quality hybrid meeting was never easier. Simply connect the engine to a PC with your preferred hybrid meeting platform and experience the high-quality audio of D-Cerno.

Interoperable

Not only does D-Cerno easily connect with hybrid meeting platforms, it's also possible to integrate this system with external recording systems, DSPs or other 3th party equipment by using the multi-channel USB interface or AES-67.

Versatile

Apart from the tabletop solution, the D-Cerno system also offers a flush-mount option: D-Cerno FM. The digital microphone flush-mount panel is housed in an elegant case with a sleek design, so you can integrate it discreetly into all kinds of meeting room set-ups.

Plug & Play

With D-Cerno's patent-protected redundancy system, putting together your system is as easy as connecting your units in daisy chain to the engine and starting the meeting. The USB interface with standard audio interface makes setting up a hybrid meeting equally easy.



D-CERNO solutions & products



D-CERNO SL

With its sleek and compact form factor, D-Cerno SL guarantees zero mobile-phone interference and a great digital sound quality. It is equipped with tactile buttons, braille indicators, headphone connections and volume control.

The chairperson units have extra functionalities, such as Next-in-line and Priority buttons. The microphone is removable (different lengths are available – just order them separately) and the cable connections are concealed for a neat overall look and feel.



FLUSH-MOUNT UNITS

Smooth and discreet, D-Cerno F-DM is a digital microphone flush-mount panel intended for basic discussion systems. It offers a crystal clear sound and excellent intelligibility. Thanks to its small form factor and elegant casing, you can easily blend it in with your meeting room furniture. The panel also has an on/off tactile microphone push button and an integrated LED light to indicate the mic status.

The chairperson unit, D-Cerno F-CM, boasts additional functionalities, such as Next-in-line and Priority buttons. A screw-lock connector allows you to pair it with a removable microphone (different lengths are available – just order them separately).

NEW



D-CERNO AE

With D-Cerno AE as the core of your discussion system, you can easily connect up to 50 D-Cerno units and start your meeting. You can easily connect the D-Cerno discussion units and start hybrid meetings. Recordings can be made on the device by using the internal storage or via a plugged in flash drive.



D-CERNO PS

The D-Cerno PS is a 48 VDC/180 W spare power supply, with a built-in indicator light on the front.



STORAGE CASE

D-Cerno SL TC is a high-quality storage case for a complete D-Cerno SL system. You can store 12 units, a central unit, a power supply, 12 microphones of various lengths (30, 40 or 50 cm) and all cables. The foam inlays have been laser-cut, creating a perfect fit for every piece of equipment, and offering maximum protection against dust and impact.



Smart Audio & Control Beyond Traditional Conferencing



Discover our
products
enhanced with
**SMART AUDIO
& CONTROL**

Presenting the Televic Smart Audio & Control Platform

A set of new microphone modes, audio processing and routing technologies to make your meetings crisper and more intelligible than ever before.

- + Optimized intelligibility for both in-room and remote participants
- + Consistent audio coverage in any room configuration
- + Reduced acoustic feedback for standalone and integrated systems
- + Hands-free discussion mode for in-person and remote audio
- + Improved integration capabilities with Confero Audio routing and DSP mode

Consistent audio coverage


Crystal clear in-room and hybrid meetings

Don't worry about bringing in additional speaker systems. Thanks to our dynamic mix-minus, based on the open microphones, you can count on consistent audio coverage in the entire meeting room. Whether your participants are right next to you or overseas (through Teams or Zoom), they will be able to receive and convey messages in the same crystal-clear quality - even when your own microphone is active.

Hands-Free Meetings

Look who's talking

Guarantee vivid engagement without confusing your listeners. With the speech-detection feature, you will always know exactly who is speaking. Even in a discussion between multiple people, you can make sure that only the speaker is displayed. It significantly improves video capturing (no need to trigger cameras with a microphone button), and ensures more accurate transcriptions and data reports.

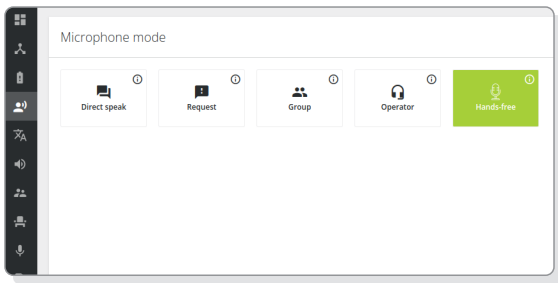

Integrate with ease

DSP Mode

In need of more control of the audio, just use the DSP mode. This will put all microphones and speakers on individual Dante channels for up to 32 devices allowing full control of the audio path inside a DSP.

Audio configuration

Routing all audio inputs and outputs has never been easier with the new Confero Audio configurator. Create multiple configurations and easily swap between the depending on the situation or use in combination with DSP mode and group inputs and outputs together to save on Dante channels.


Reduce acoustic feedback

By default, the auto-gainsharing feature is enabled on all our microphone modes. That means that the system monitors all the microphones at the same time. It amplifies the speaker's voice, subdues the listeners' microphones, and reduces background noise. Do you want to turn up the volume? No need to worry about echoes or feedback: every participant will hear your message clearly and accurately.

Don't Push it


Combined together Dynamic Mix-Minus, Gain Sharing and Speech Detection, forms our new Hands-free microphone mode without the need to push a button or ask permission before you speak. All microphones are open, so just join the conversation, hands-free.

Need to talk in private? Use the push-to-mute functionality to temporarily cut the microphone.

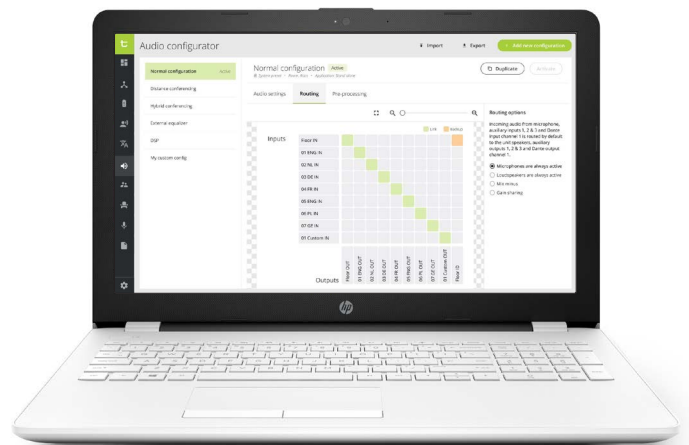


Meeting Management Software

Get the most out of your audiovisual conferencing equipment with Televic's dedicated software solutions for streamlined meeting management. With our modular solutions, you can control every detail of your meeting from start to finish. From comprehensive voting options to document management, recording, and import or export functions.

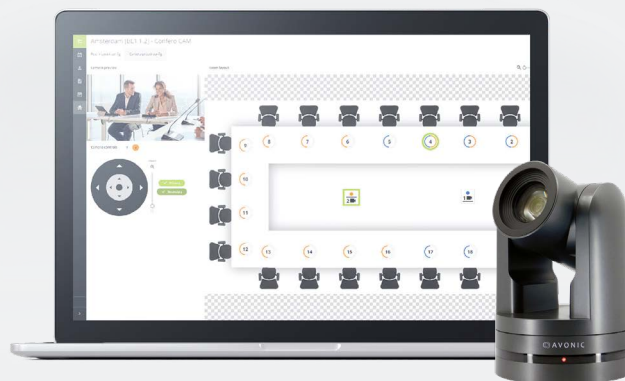

CONFERO

Manage meetings right from your own browser, the Confero platform is entirely web-based! From simple room setup and meeting control to advanced planning, camera configuration and hybrid meeting management, Confero can be a modular or all-in-one meeting management solution.

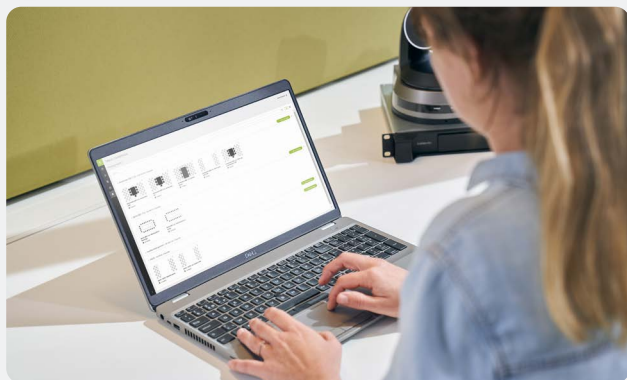

CONFERO CAM

Confero CAM, your hands-free camera director, adds out-of-the-box camera control to your meeting room. As a result, you do not need a production team to deliver a professional and engaging video output for participants of a hybrid meeting or viewers of a live stream.

Confero CAM enables effortless meeting capture, streaming and increased engagement for your hybrid meetings.

CONFERO 360

Confero 360 is Televic's solution for easy room setup and meeting control, right from the Plixus central unit's web page. Its intuitive interface allows a chairperson or operator to control the meeting, microphones and voting, as well as view the meeting report after the meeting.

CONFERO ADVANCED AUDIO


This tool makes it possible to configure the audio path and audio parameters of a Confero-based meeting room. You can efficiently group and route all audio inputs and outputs, and manage everything through a convenient matrix. Don't forget to enjoy its flexibility in signal routing reducing the dante channel count and processing power needed for echo cancellers, allowing you to economize on your DSP of choice.

CONFERO PLAN


Confero PLAN is a solution for preparing meetings in advance directly on the Confero Cloud platform: create and manage a participants database, set up meeting templates, and publish meetings with structured agendas and voting items integrated upfront. The Confero 360 functionalities are already included.

CONFERO MEET

Confero MEET is Televic's solution for organizing and managing hybrid meetings. It allows you to easily invite delegates to participate in a meeting, either in person or remotely, from their home or office, using a standard web browser.

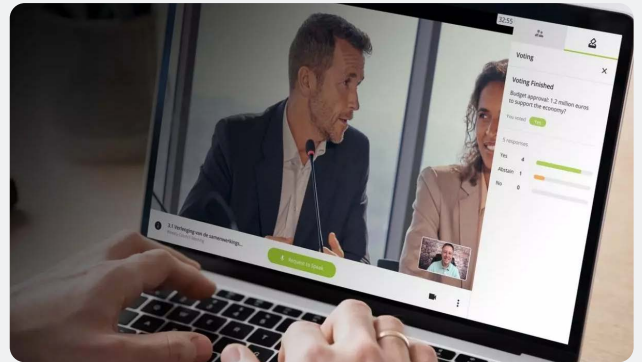

CoCon flexible module architecture gets you exactly what you need. Combine all modules for complex multilingual meetings or use just the ones you need to get the discussion going.

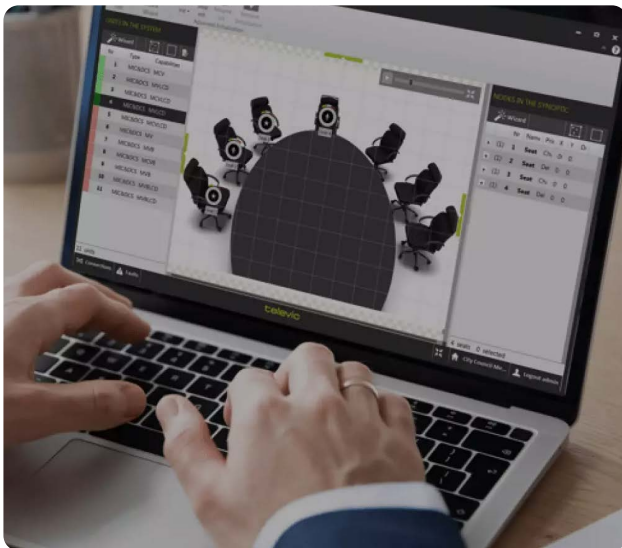

COCON AUTHENTICATION

Easily identify participants using a badge. Provide options for fixed or free seating.

COCON DISCUSSION

Get all core discussion options in a single application: configure the room, manage the meeting, and control the system, all-in-one simple to use application. The CoCon's Discussion Module serves as the base of the suite and is needed to run other plugin modules.

COCON SIGNAGE

Display meeting information to get everyone in the room up to speed: title of the meeting, meeting timer, speaker list, voting results, agenda and current item, and more. Connect to projectors or large screens easily.

COCON VOTING CONTROL

Make sure your voting sessions are reliable and correct. Get extensive configuration options (voting timer, voting mode, voting participants, etc.), control the vote easily, and monitor safely.

NEW

UNITE

Let's connect



Talk, Listen or Interact. Anywhere, anytime and in all situations.

As meetings, gatherings, and events become ever more interactive, having the right equipment is crucial to ensure clear communication. **Unite** is a Digital Wireless Communication System designed to enable seamless speaking, listening, and interaction, ensuring everyone can hear and be heard.

UNITE features

DECT

Unite uses DECT technology which is a license-free and future-proof wireless transmission technology suitable for high-quality audio communication. All communication is encrypted using a military graded AES-256 standard and allows up to 32 simultaneous groups to operate in parallel.

Interoperable

Unite has the widest integration capabilities in its market allowing users to connect additional audio sources via analog line-in, connect Bluetooth or USB connection.

Versatile

With the unique combination of transmitters, receiver and access points, Unite is the most versatile wireless communication system in the market applicable, able to be used in applications such as tour guiding and language distribution but also as wireless presentation system or within education.

Audio Quality

Unite not only uses the highest quality audio transmission but also has integrated DSPs in each device to enhance the experience by reducing noise and creating a consistent audio level.

Battery Management

The intelligent battery management system of the Unite system results in a best-in-class autonomy of up to 18 hours and with a wide selection of charging options, your wireless communication system will always be ready to go.

Inclusive

By combining a receiver with a personal neck loop, the Unite system is ready to be used for assistive listening. Even blind coverage applications are possible with the combination of multiple speaker and multiple simultaneous groups.



UNITE Product Range



UNITE TP

The **Unite TP** bodypack can be used as the transmitter within the Unite system. With the integrated **DSP**, these transmitters ensure the best audio quality even in noisy environments such as factories or busy cities. With the integrated USB and Bluetooth integrating external audio sources and enhancing your presentation becomes very easy.



UNITE TH

The Unite TH can, similar to the Unite TP, be used as a transmitter but comes in an easy to hold handheld microphone, ideal for wireless presentations as well as to share with the participants during a Q&A session.



UNITE RP

The **Unite RP** bodypack receiver allows the user to select the correct channel and listen in on the conversation. With its compact and light-weight design, it can easily be attached to a belt or worn around the neck with the neck strap and the 3.5 mm mini-jack allows for easy connectivity with headphones.



UNITE RP-T

The **Unite RP-T** expands on the **Unite RP** with the talkback functionality. With a simple press of the button, participants can join the discussion and ask questions. Talking can be done by connecting a headset to the RP-T or using a headphone in combination with the build-in microphone.



UNITE AP4

The **Unite AP4** access point allows for the integration of the Unite communication system into a larger AV solution by using analog I/O or Dante. The access point can function as a receiver or transmitter, capable of receiving the signal of up to 4 microphones or transmitting 4 different languages. 8 AP4 units can be combined.



INTERPRETATION

Language Distribution



Multilingual meetings become easier to manage with our **interpretation** technology.

Use infrared language distribution to reach every member in the audience in their native language. Lingua IR is easy to set up, flexible to configure, and highly secure. Combining it with the Lingua Interpreter Desk makes multilingual meetings a breeze.

Save time

Install quickly, configure easily, and get everything up and running in no time. No expert IR skills required.

Get full digital sound

Enjoy all the benefits of network audio with Dante. That's crisp sound, from source to receiver.

Work smarter

Forget difficult calculations with patented Automatic Delay Line Compensation and get intelligent info with a smart charging tray.



LINGUA TRANSMITTER

Enjoy fully networked digital audio with Dante, from source to receiver, and easily expand from 6 to 12 or 40 channels with a license upgrade. Use the web server for easy configuration with fine-grained channel display controls. Fully standards compliant with IEC 61603-7 and IEC 60914.



LINGUA RADIATOR

Get all infrared signals across with great clarity and wide coverage with **Lingua RAD_H**. Easily installed and quickly set up, this compact and lightweight device, combined with a variety of mounting options makes mobile installations a breeze. Just set the radiators, configure the system, and enjoy crisp sound for all participants. A VESA wall mount can be purchased separately.



LINGUA CHARGING CASE

Lingua CHC easily charges and transports up to 64 Lingua Receivers. Use the built-in smart web server to get detailed Receiver management information and software updates.



LINGUA RECEIVER

Lingua R makes it easy for participants to receive up to 40 channels* in a beautiful design. Easy switches on the sides allow the selection of channels and volume adjustment on a clear OLED display. A rechargeable Li-Ion battery provides 20h of autonomy, more than enough for extended meetings.



LINGUA BATTERY PACK

Additional Lithium ion rechargeable battery pack to use with the Lingua receiver. The batteries have over-charge, over-discharge, over-current and short-circuit protection. The autonomy is about 20 hours. The minimum order quantity is 6 batteries.



HQ Belgium

+32 51 30 30 45

conference@televic.com

www.televic.com/en/conference

Asia

+86 21 61 48 01 23

conference@televic.com

www.televic-conference.com.cn

France

+33 3 74 09 52 76

conference-france@televic.com

www.televic-conference.fr

United States

(240) - TELEVIC

(240) - 835 - 3842

conference-us@televic.com

